

**S** Sandberg®  
**ACTIVE** 

# Powerbank USB-C PD 20W 30000


Quick guide

420-68



[www.sandberg.world](http://www.sandberg.world)


## Charge Powerbank

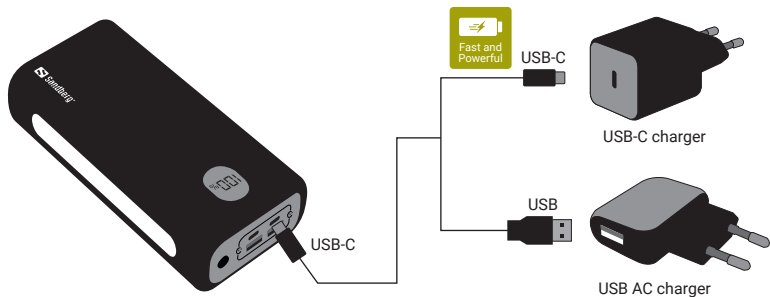

Charging status display




Click to check the battery level

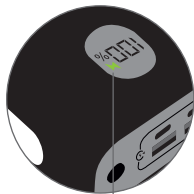


Fast charging


## Charge devices

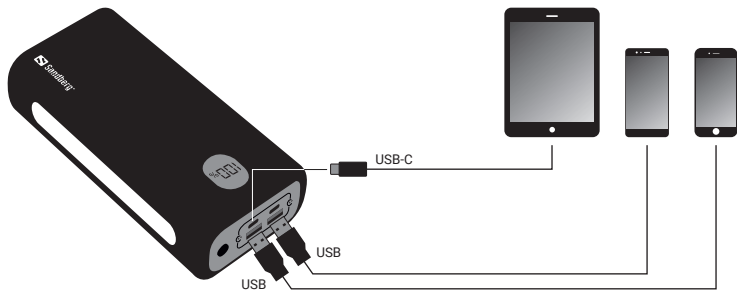


## Flashlight

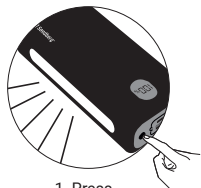

1. Press

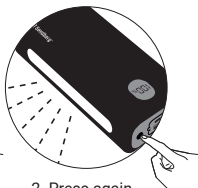

2. Press again  
to flash

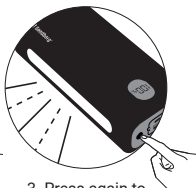

3. Press again to  
flash slowly



4. Press again to  
turn off



Support

<http://helpdesk.sandberg.world>

## Warranty

There is a five-year warranty on your Sandberg product. Please read the warranty terms and register your new Sandberg product at [www.sandberg.world/warranty](http://www.sandberg.world/warranty)

**5**  
Years  
Warranty

### Powerbank USB-C PD 20W 30000

Capacity: 30000 mAh / 111 Wh

USB-C input 1+2: 5V/3A, 9V/2A (18W max)

USB-C output: 5V/3A, 9V/2.22A, 12V/1.67A (20W max)

USB-A output 1+2: 5V/4.5A, 9V/2A, 12V/1.5A PD (22.5W max)

[www.sandberg.world](http://www.sandberg.world)

Item no. 420-68

Made in China

Sandberg A/S  
Bregnerødvej 133D,  
3460 Birkerød, Denmark



For information on handling electronic waste, see [www.sandberg.world/weee](http://www.sandberg.world/weee)